


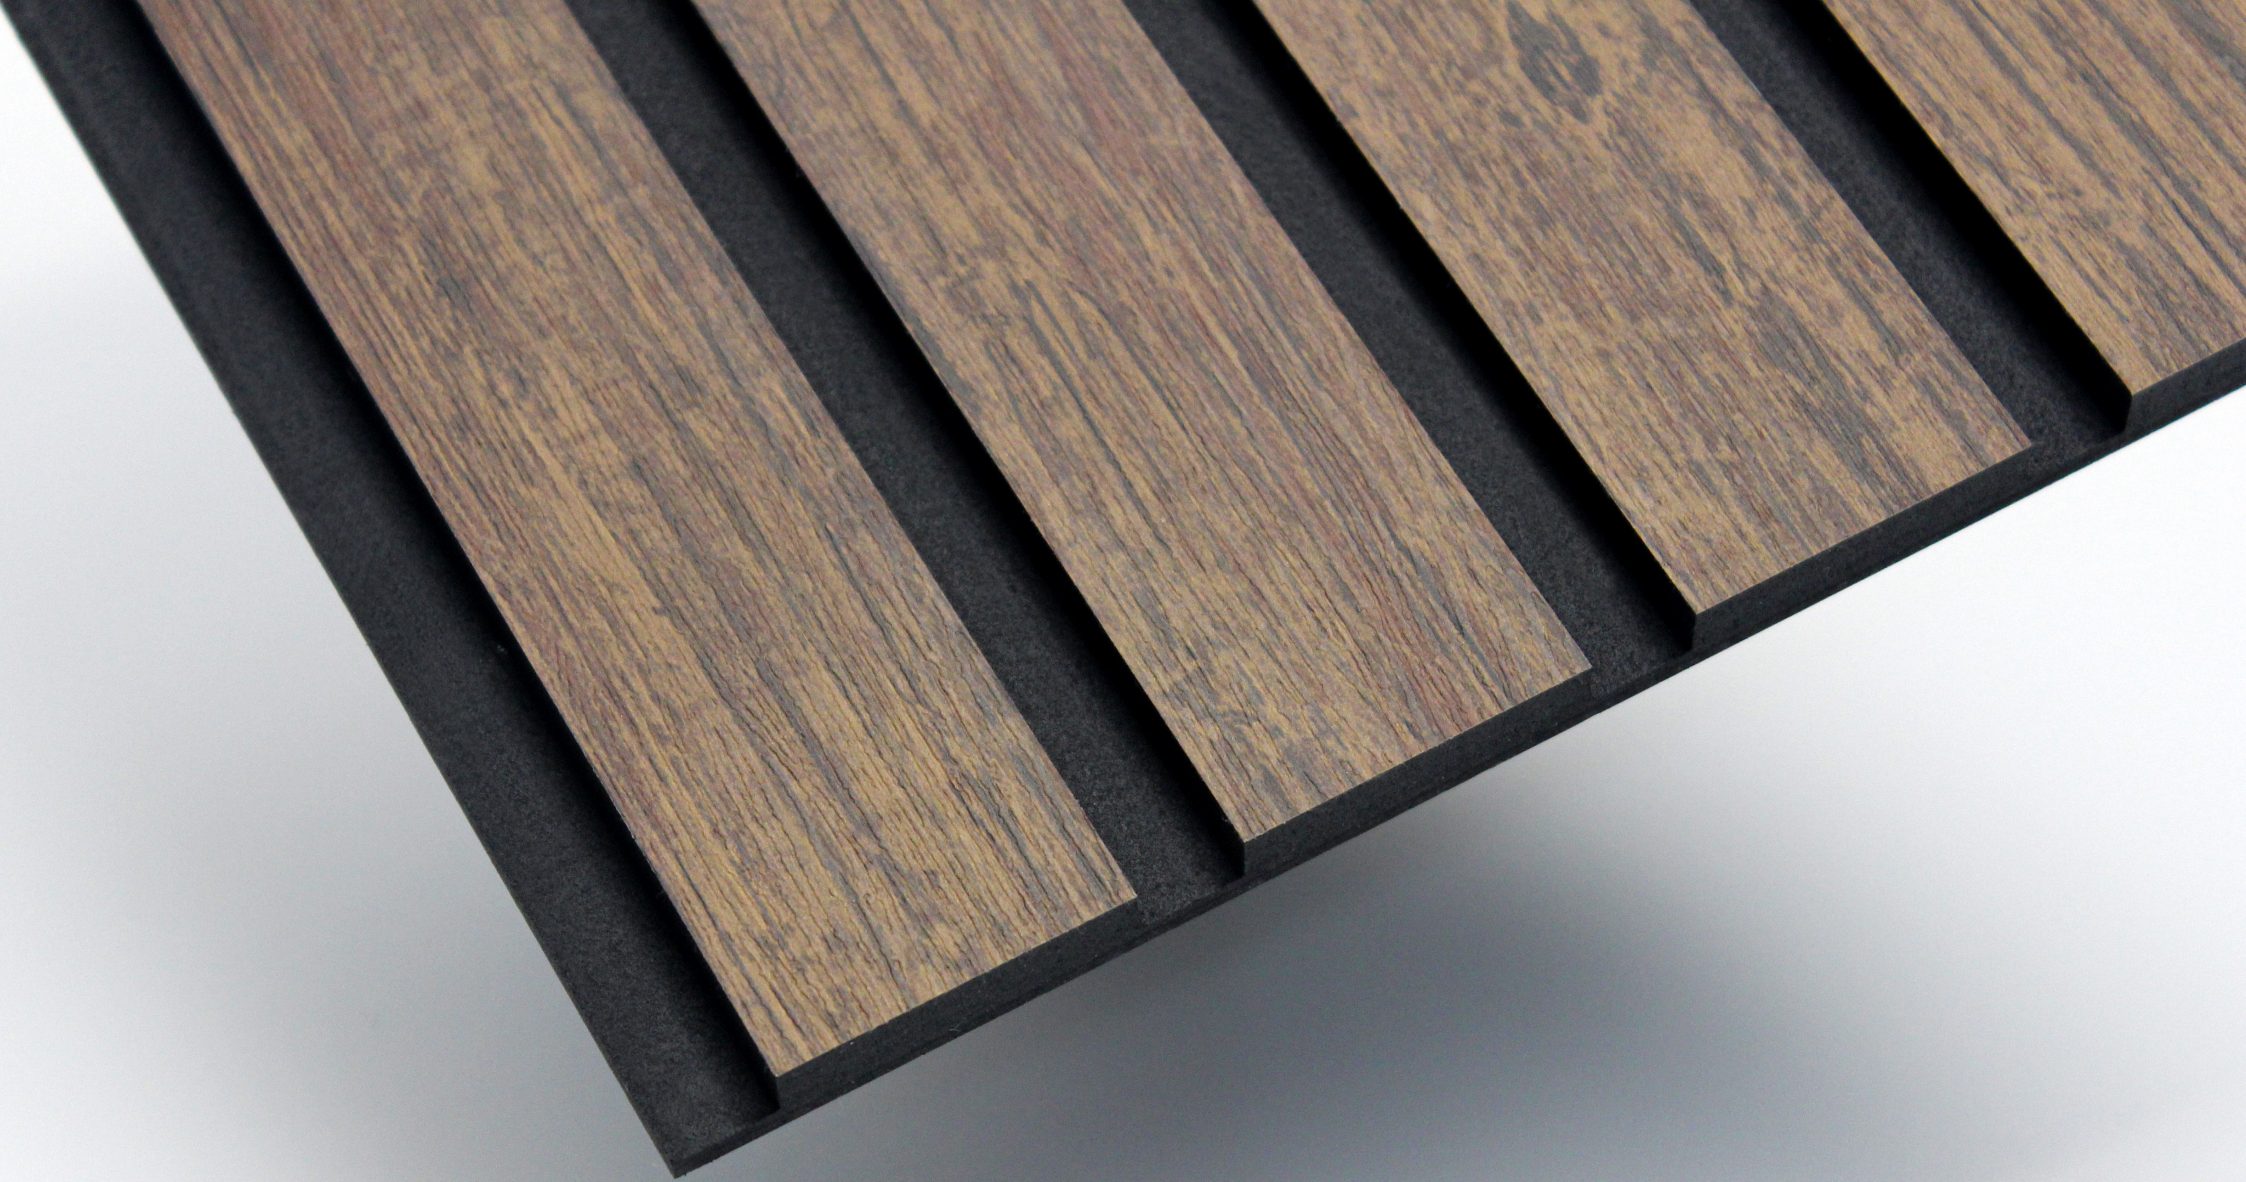

wallscapeTM

Installation Guide

01772 652099
sales@optimumsigns.co.uk

Installation Instructions

1. Prepare the wall:

Clear the wall of any imperfections including nails and screws.
Clean the wall with a damp cloth removing dust and leave to dry.

2. Measure the wall height and trim panels:

We recommend using a circular saw or normal saw (foxtail) to trim the panels.

3. Fix panels to the wall:

We recommend using grab adhesive but you can also use screws.

If using screws please make sure the correct fixings are used if going into plasterboard, for example.

Each panel starts with a slat and ends with a black gap.
Starting from one side fix the panels to the wall.

4. Cutting the panel width:

When you reach the end of the wall you might need to trim the last panel to fit.
Measure the remaining width and cut to size.

5. Aftercare

Once your Wallscape™ has been installed you can clean and dust with a dry or damp cloth.

Panel Dimensions

Full panels:

- A. (W) 605mm x (H) 2400mm x (D) 10mm
- B. (W) 1210mm x (H) 2400mm x (D) 10mm*

Narrow Slats:

(W) 38mm - 12mm gap

Wide Slats:


(W) 89mm - 12mm gap

Wave:

(W) 38mm - 12mm gap

Herringbone:

210mm x 65mm - 6mm gap

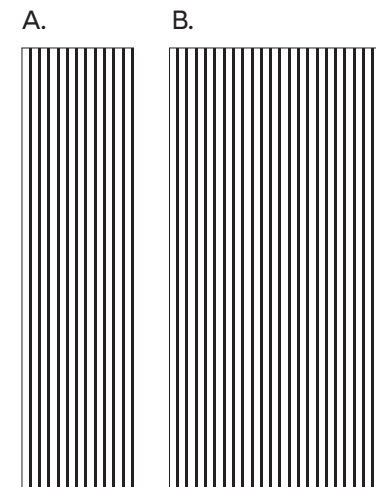

**1210mm widths supplied on request based on project specification.*

Need more help?

For installation help or more technical details please contact:

01772 652099 or sales@optimumsigns.co.uk